

Valid from firmware version: V1.1

CHANNEL	VALUE	FUNCTION
25ch		
1	000-255	PAN 0°→540°
2	000-255	PAN FINE
3	000-255	TILT 0°→260°
4	000-255	TILT FINE
5	000-255	PAN/TILT SPEED Fast to Slow
6	000-255	CTO 0%→100%
7	000-007 008-016 017-025 026-034 035-043 044-052 053-063 064-067 068-071 072-075 076-079 080-083 084-087 088-091 092-095 096-099 100-103 104-107 108-111 112-115 116-119 120-127 128-189 190-193 194-255	COLOR Open Color 1 Color 2 Color 3 Color 4 Color 5 Color 6 Open Open+ Color1 Color1 Color1+ Color2 Color2 Color2+ Color3 Color3 Color3+ Color4 Color4 Color4+ Color5 Color5 Color5+ Color6 Color6 Color6+ Open Open Counter-Clockwise rotation, fast to slow Stop Clockwise rotation, slow to fast
8	000-007	FROST Close

CHANNEL	VALUE	FUNCTION
	000-255	Open
9	000-255	ZOOM Wide→Narrow
10	000-255	ZOOM FINE
11	000-255	FOCUS 0%→100%
12	000-255	FOCUS FINE
13	000-007 008-015 016-131 132-139 140-181 182-189 190-231 232-239 240-247 248-255	STROBE Close Open Strobe from Slow to Fast Open Fast Open Slow Close from Slow to Fast Open Slow Open Fast Close from Slow to Fast Open Random Strobe from Slow to Fast Open
14	000-255	DIMMER 0%→100%
15	000-255	DIMMER FINE
16	000-255	BLADE 0°→180°
17	000-255	BLADE DW 1 0%→100%
18	000-255	BLADE DW 2 0%→100%
19	000-255	BLADE UP 1 0%→100%
20	000-255	BLADE UP 2 0%→100%
21	000-255	BLADE LF 1 0%→100%
22	000-255	BLADE LF 2 0%→100%
23	000-255	BLADE RG 1 0%→100%
24	000-255	BLADE RG 2 0%→100%

CHANNEL	VALUE	FUNCTION
25		SPECIAL FUNCTION (To activate following functions, stop in DMX value for at least 3 seconds.)
	000-009	No Function
	010-029	No Function
	030-039	Linear
	040-049	Square law
	050-059	Inv SQ law
	060-069	S curve
	070-079	Fan Mode Super Power
	080-089	Fan Mode Auto
	090-099	Fan Mode Quiet
	100-109	Light Source Frequency Setting Enable
	110-119	Light Source Frequency Setting Disable
	120-122	No Function
	123	900Hz
	124	1000Hz
	125	1100Hz
	126	1200Hz
	127	1300Hz
	128	1400Hz
	129	1500Hz
	130	2500Hz
	131	4000Hz
	132	5000Hz
	133	6000Hz
	134	10000Hz
	135	15000Hz
	136	20000Hz
	137	25000Hz
	138-139	No Function
	140-149	Pan/tilt Reset
	150-159	Effect Reset
	160-169	No Function
	170-179	No Function
	180-199	No Function
	200-209	Reset all
	210-219	Dimmer Speed Fast
	220-229	Dimmer Speed Smooth
	230-231	Lock Mode Enable
	232-233	Lock Mode Disable
	234-235	Color Short Cut Enable
	236-237	Color Short Cut Disable

CHANNEL	VALUE	FUNCTION
	238-255	No Function